

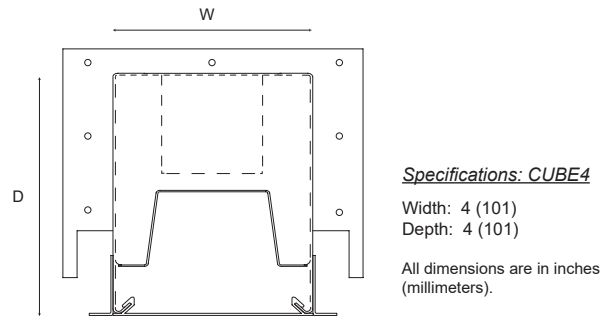
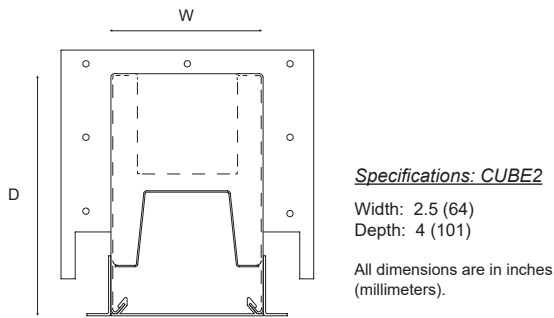
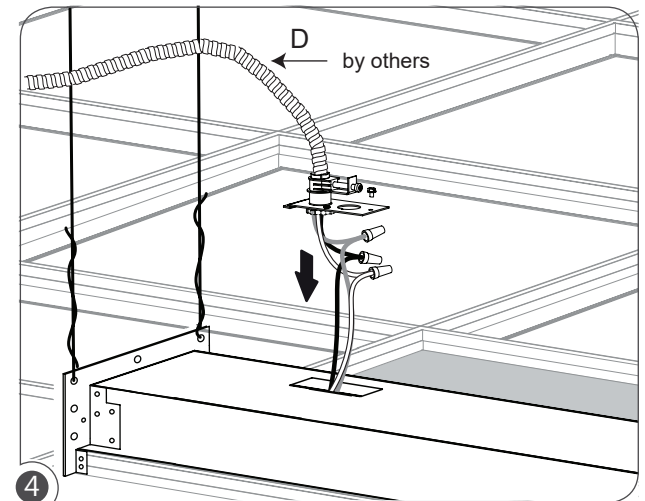
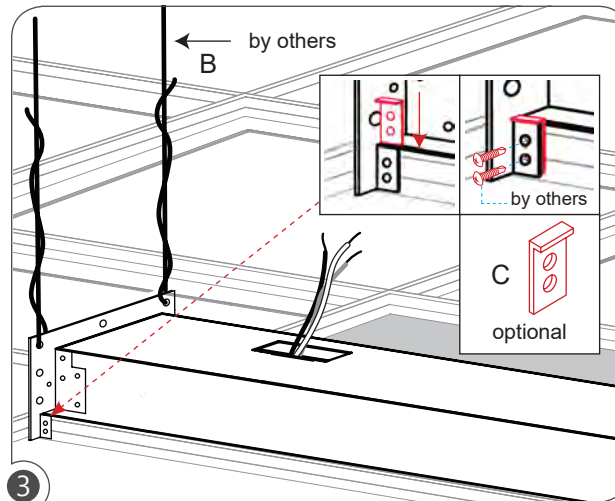
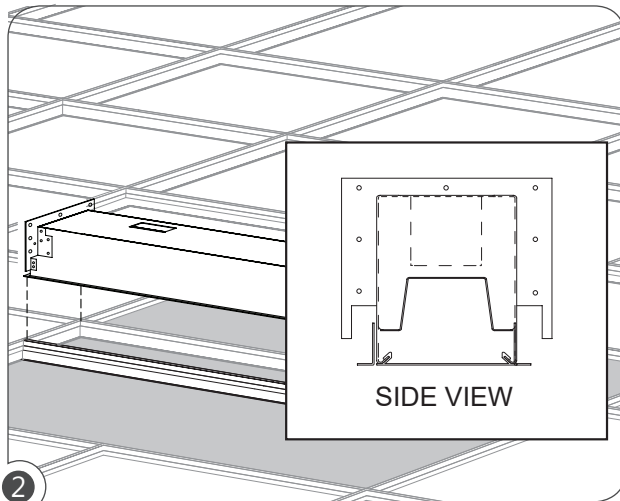


CUBE2, CUBE4 T-BAR INSTALLATION INSTRUCTIONS

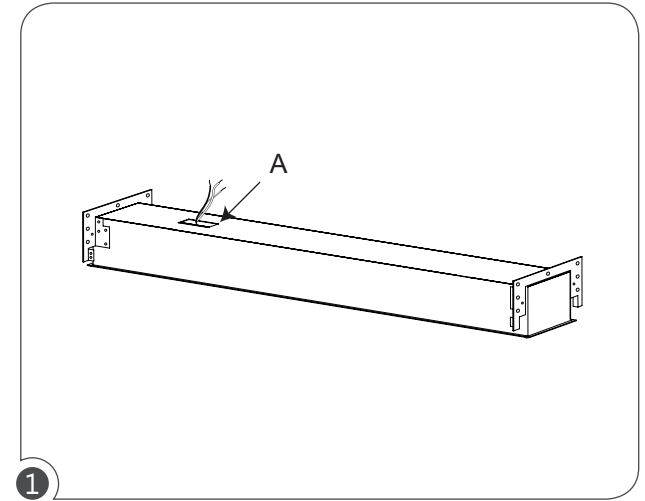

PART LIST

- A: Access plate
- B: Support wire
- C: Bracket (optional)
- D: BX cable connector
- D: BX cable connector

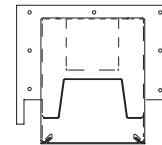

866-471-7711
 utopialighting.com
 info@utopialighting.com


Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty voided.



WARNING:
 RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


CUBE2, CUBE4

T-BAR INSTALLATION INSTRUCTIONS

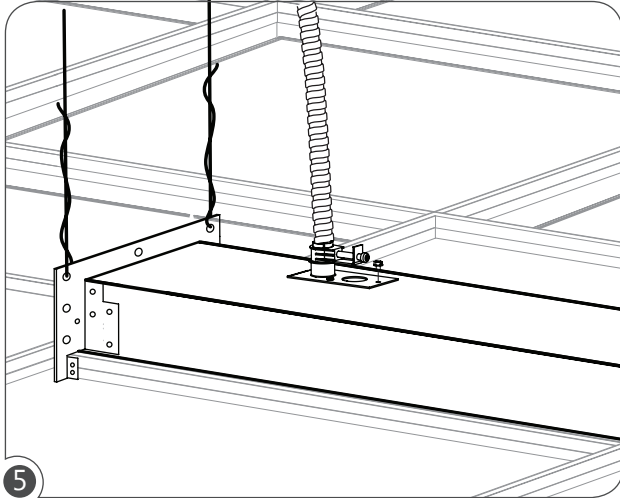


5

Secure wires and install access plate to fixture.

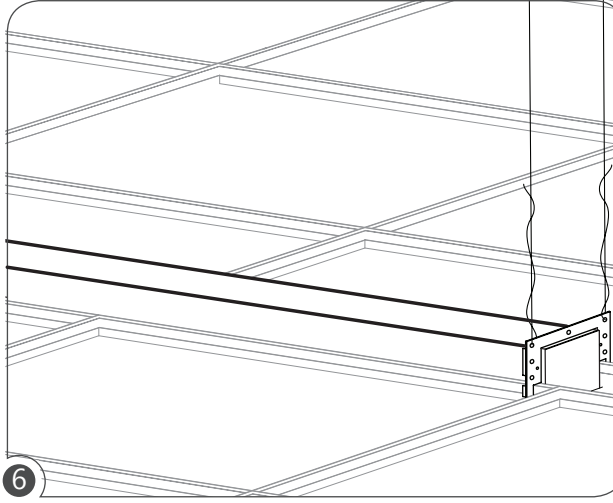

6

Make sure both ends of fixtures is secure with support cable and bracket is properly installed between T-bar grid and fixture.

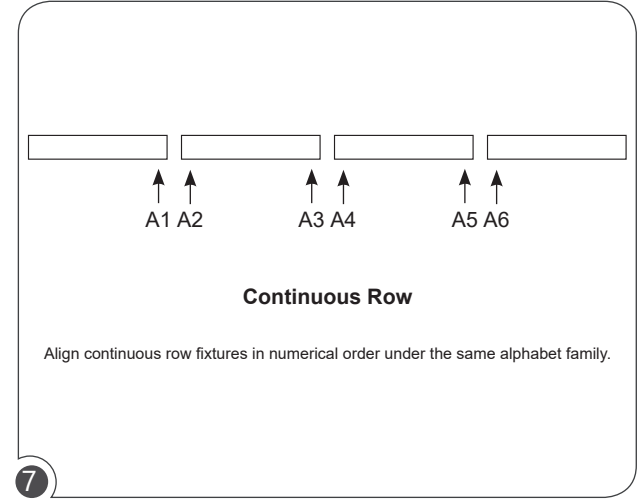

7

Refer to [7A, 7B and 7C] on the last page for detailed installation instructions.



866-471-7711
utopialighting.com
info@utopialighting.com

Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty voided.

WARNING:



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

CUBE2, CUBE4



T-BAR INSTALLATION INSTRUCTIONS

CONTINUOUS ROW

TOOL(S) NEEDED:


Option 1) Cordless drill and an elbow or L-shape adapter with Philips Insert Bit extension.

 Option 2) Flexible Screwdriver with Philips Insert Bit.

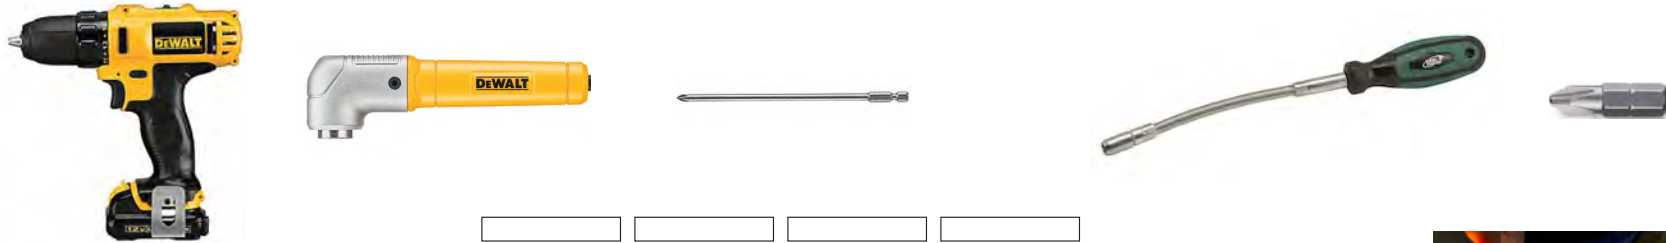


Continuous Row


Align continuous row fixtures in numerical order under the same alphabet family.

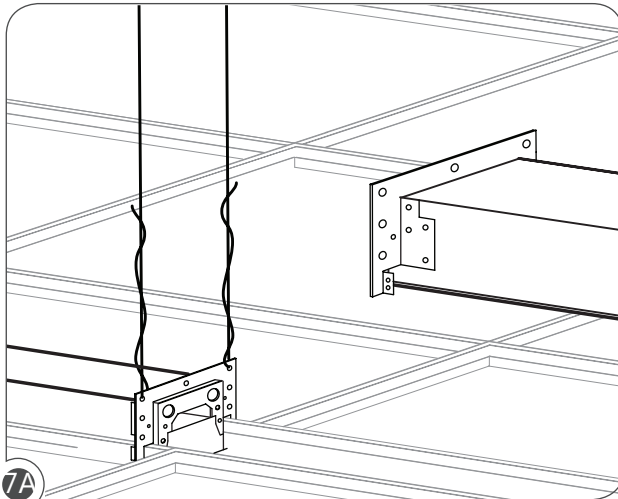

Align fixtures side by side onto screw slot ceiling.

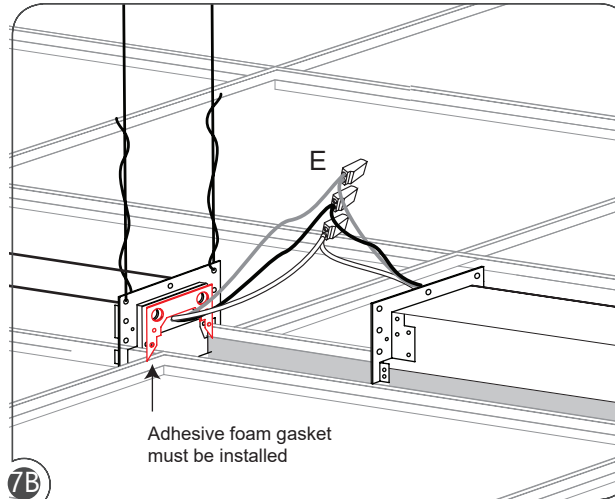

Connect power wire together from each fixture running end to end for continuous row with Wire connectors(E).

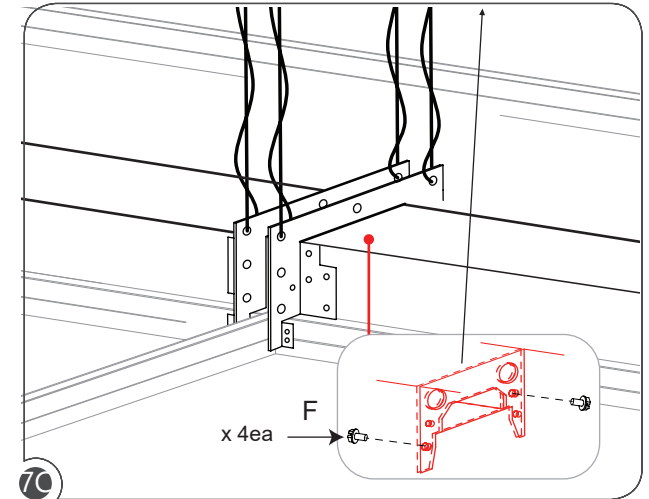

Align fixtures together and Screw from the inside with 4 screws(F).



866-471-7711
utopialighting.com
info@utopialighting.com

Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty voided.

WARNING:




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.



CUBE2, CUBE4

T-BAR INSTALLATION INSTRUCTIONS

INDIVIDUAL

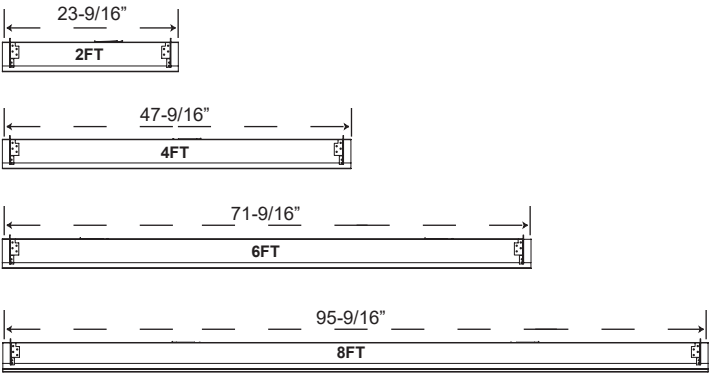

CONTINUOUS

 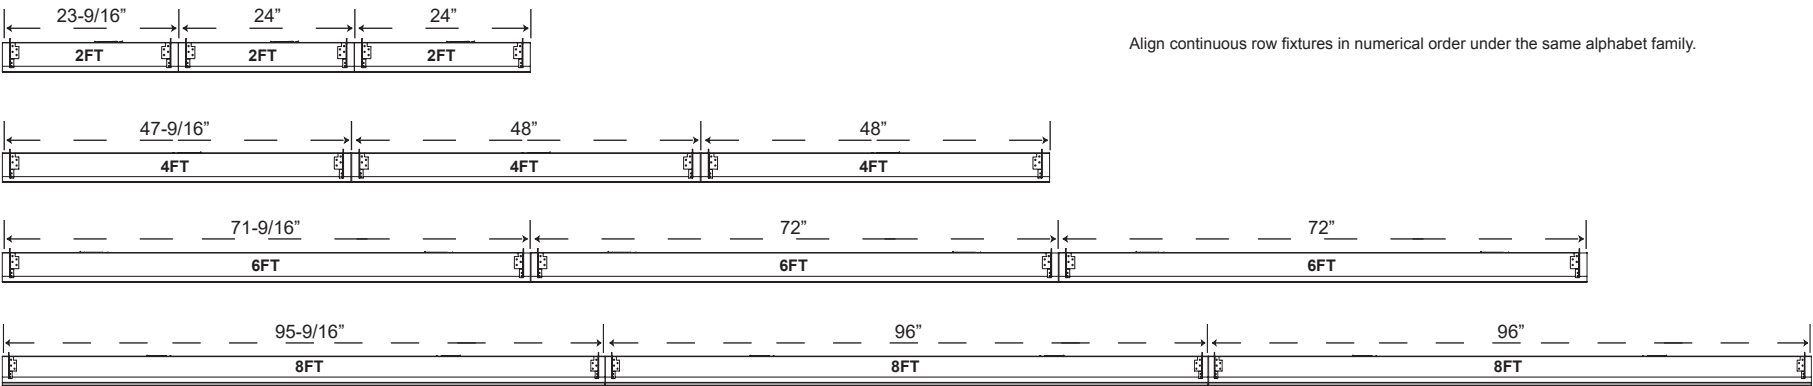

Continuous Row

Align continuous row fixtures in numerical order under the same alphabet family.



866-471-7711
utopialighting.com
info@utopialighting.com

Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty voided.

WARNING:



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.