
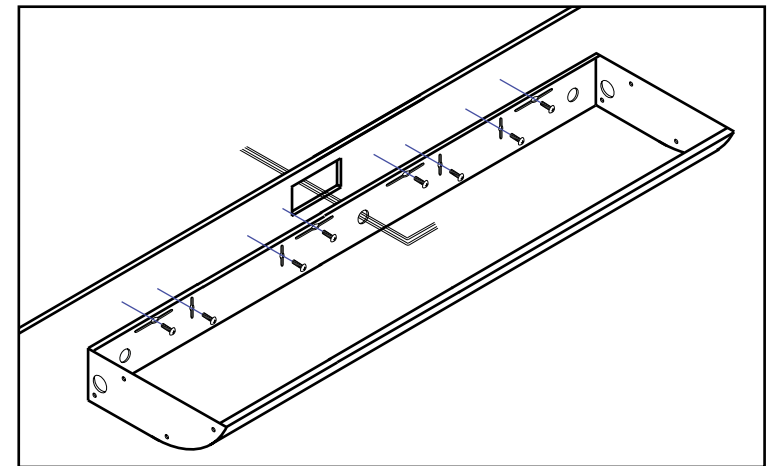
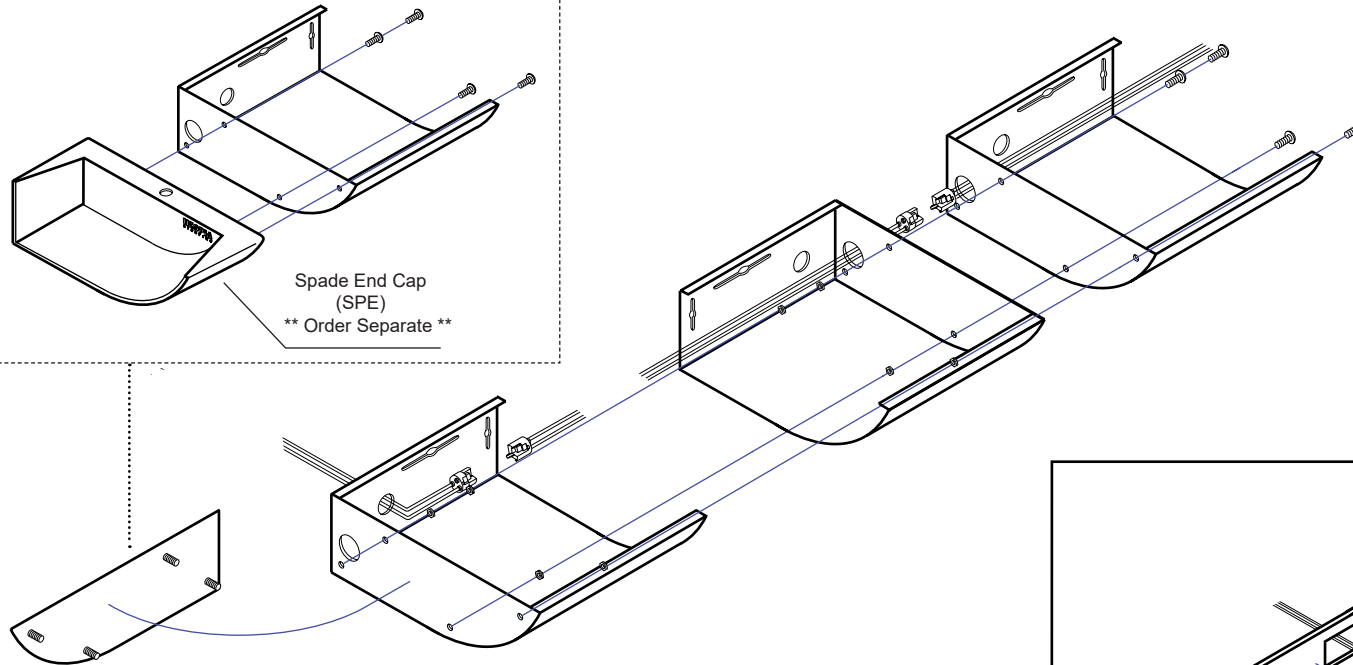


WIOL / WIOP / WIODLP

INSTALLATION INSTRUCTIONS

A) Wall Mounting and Fixture Joining

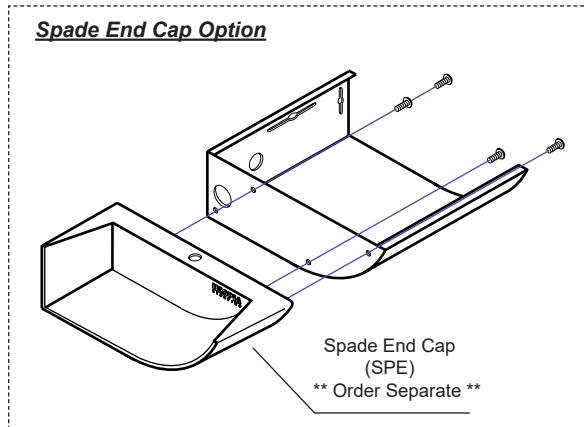

- 1) Cut a rectangular window on the wall.
- 2) Insert building power wire through the fixture.
- 3) Screw the fixture to wall as shown.



866-471-7711
utopialighting.com
info@utopialighting.com

Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty is voided.


WARNING:



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

WIOL / WIOP / WIODLP INSTALLATION INSTRUCTIONS

B) Fixture with Tenon Installation

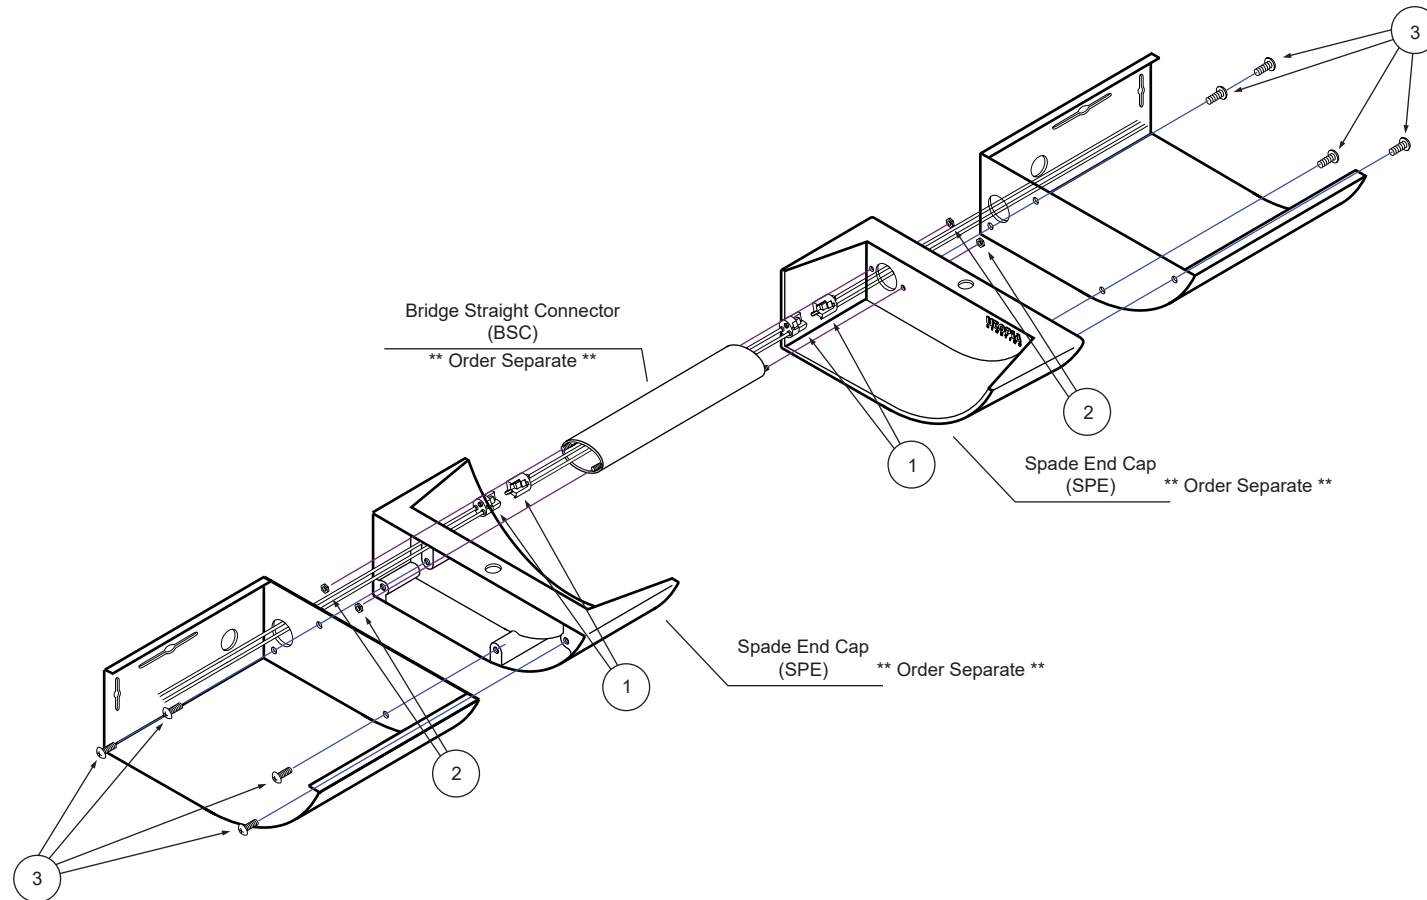

- 1) Connect the male and female quick wire connectors, then put connector into the bridge straight connector.
- 2) Connect bridge straight connector to spade end cap, then screw nut and tighten it.
- 3) Bolt fixture together. Be sure to align and level the fixture for a straight row.



866-471-7711
utopialighting.com
info@utopialighting.com

Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty is voided.

WARNING:



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.