

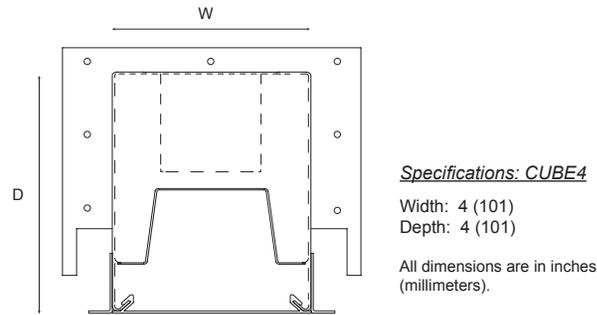
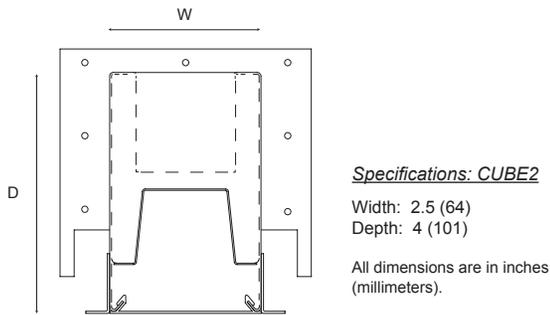


# CUBE2, CUBE4 T-BAR INSTALLATION INSTRUCTIONS

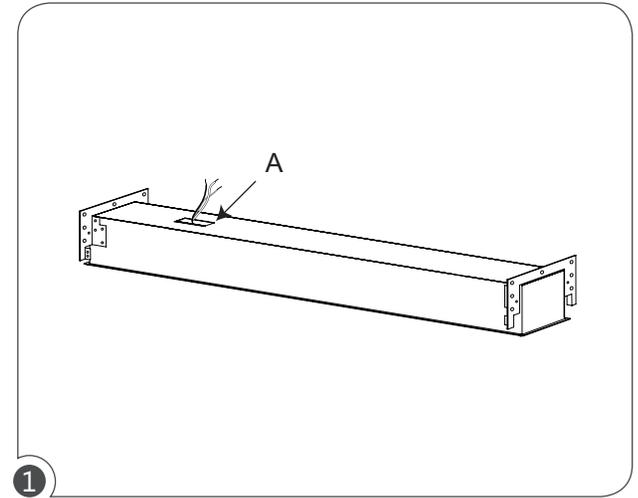


## ● PART LIST


- A: Access plate
- B: Support wire
- C: Bracket (optional)
- D: BX cable connector

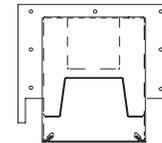


**1** Remove access plate(A) and have wires out ready.

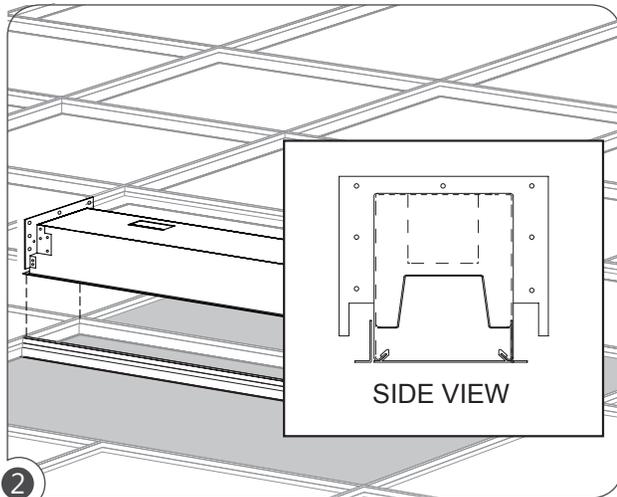

**2** Drop fixture on to T-bar ceiling.

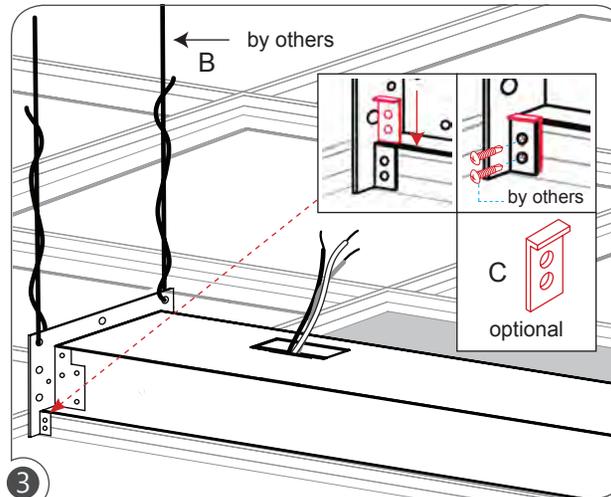

**3** Secure fixture with support wire(B) and install bracket(C) in between T-bar grid and Fixture.

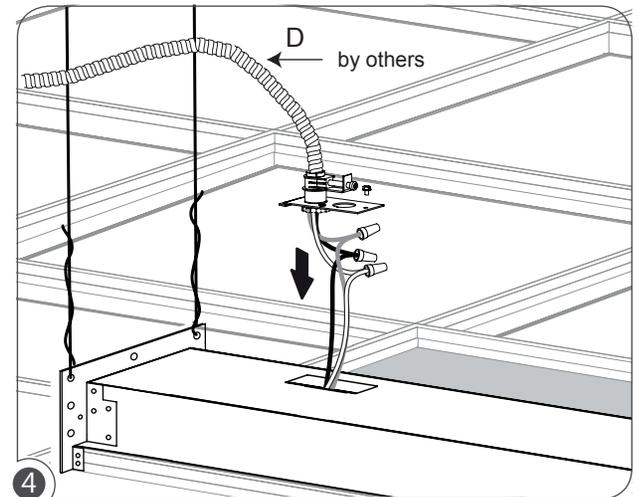

**4** Connect BX cable connector to access plate and make wiring from BX cable to fixture wires.



866-471-7711  
 utopialighting.com  
 info@utopialighting.com

Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty voided.


WARNING:



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


# CUBE2, CUBE4

## T-BAR INSTALLATION INSTRUCTIONS

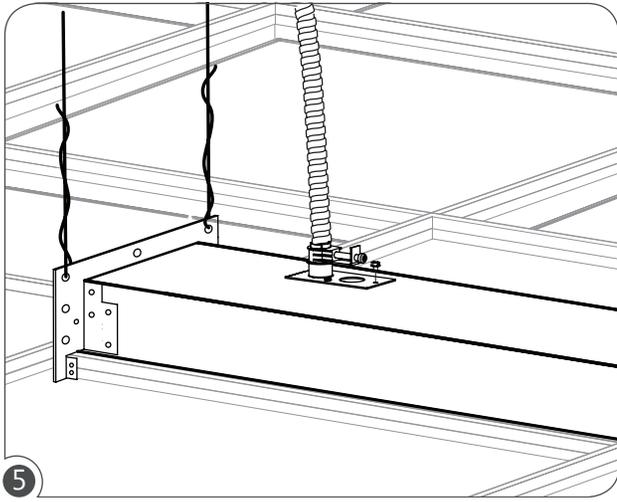


5

Secure wires and install access plate to fixture.

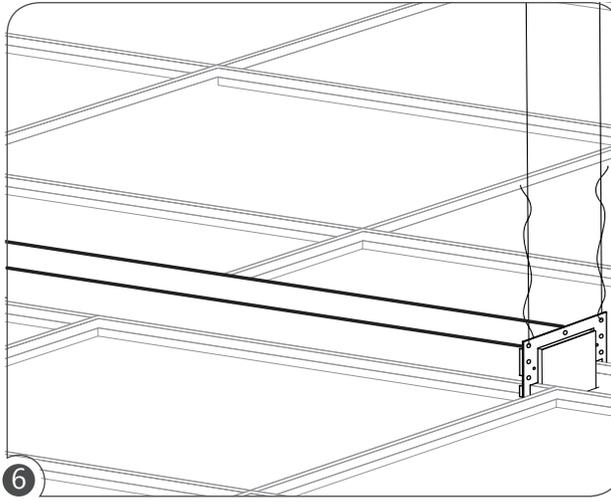

6

Make sure both ends of fixtures is secure with support cable and bracket is properly installed between T-bar grind and fixture.

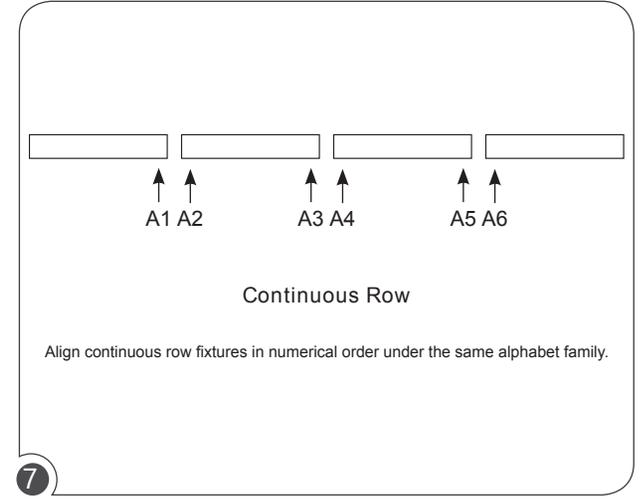

7

Refer to [7A, 7B and 7C] on the last page for detailed installation instructions.



866-471-7711  
utopialighting.com  
info@utopialighting.com

Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty voided.

WARNING:



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


# CUBE2, CUBE4 T-BAR INSTALLATION INSTRUCTIONS

## CONTINUOUS ROW

### TOOL(S) NEEDED:


Option 1) Cordless drill and an elbow or L-shape adapter with Philips Insert Bit extension.

 Option 2) Flexible Screwdriver with Philips Insert Bit.




Continuous Row


Align continuous row fixtures in numerical order under the same alphabet family.

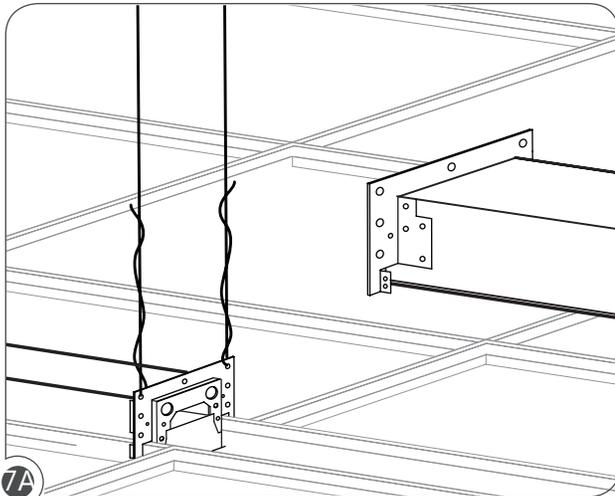

7A Align fixtures side by side onto screw slot ceiling.

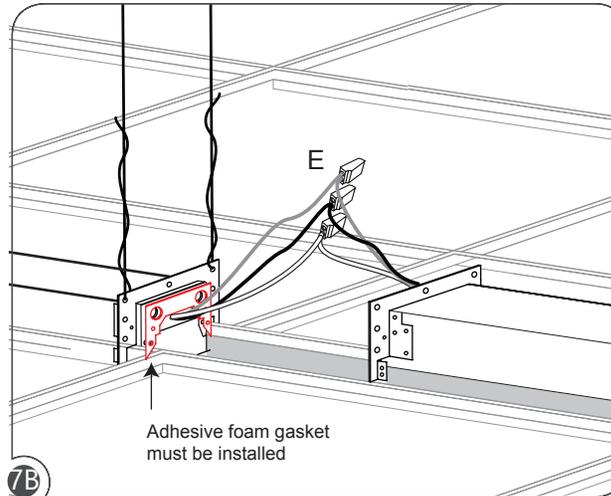

7B Connect power wire together from each fixture running end to end for continuous row with Wire connectors(E).  
Adhesive foam gasket must be installed

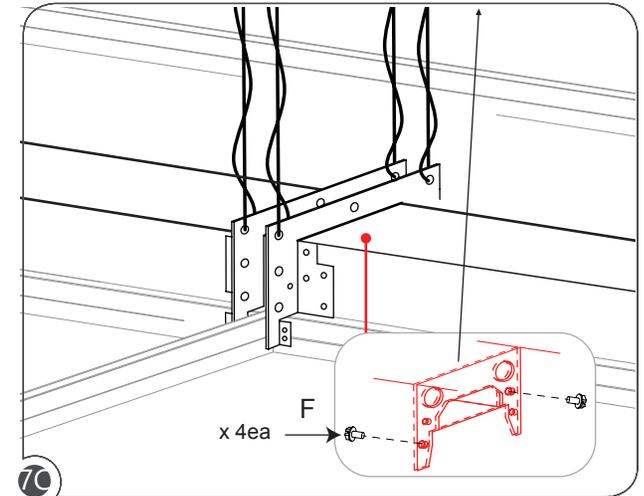

7C Align fixtures together and Screw from the inside with 4 screws(F).  
x 4ea



866-471-7711  
utopialighting.com  
info@utopialighting.com

Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty voided.

WARNING:



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.