

# CUBE2, CUBE4 WALL MOUNT INSTALLATION INSTRUCTIONS



## BEFORE YOU BEGIN

Read and follow all safety instructions



### WARNING

#### RISK OF FIRE, EXPLOSION AND ELECTRIC SHOCK

- This product should be installed, inspected, and maintained by a qualified electrician only, in accordance with the NEC (National Electric Code) and all local codes.
  - Turn off electrical power before inspection, installation or removal.
  - Use only UL (or other NRTL) approved wire for input/output connections.
  - Make sure LEDs and drivers are cool to touch when performing maintenance.
- Make sure the supply voltage is the same as the rated voltage of the luminaire.
- Do not install in a hazardous atmosphere, except where the ambient temperature does not exceed the rated operating temperature of the fixture.
  - Keep tightly closed when in operation



#### Prepare Electrical Wiring



##### Electrical Requirements

Must check if the local voltage range is correspond with the working voltage of the fixture. Use min. 75°C supply.



##### Grounding Instructions

The grounding and bonding of the overall system shall be done in accordance with NEC Article 600 and local codes.



Follow all applicable safety procedures and use Personal Protective Equipment such as hardhats, safety glasses, reflective vest, electrical safety gloves, fall protection equipment and safety toe boots during the installation, operation, and maintenance of the luminaire.



866-471-7711  
utopialighting.com  
info@utopialighting.com

Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty is voided.

WARNING:




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

# CUBE2, CUBE4 WALL MOUNT INSTALLATION INSTRUCTIONS


## WALL MOUNT BRACKET

\*Dimensions are in inches (millimeters).

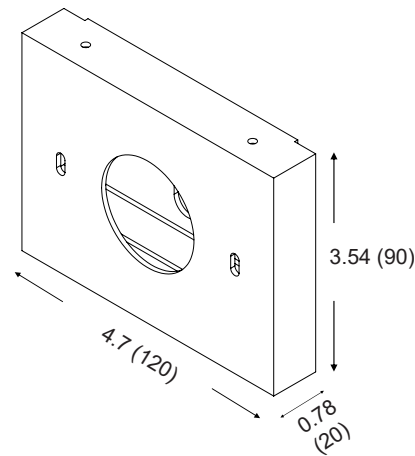


## MOUNTING LENGTH INFORMATION

### CUBE2/4 Individual Run

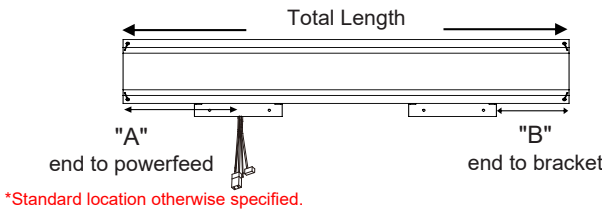

ITEM	TOTAL LENGTH	"A"	"B"
CUBE-IND 2FT	24-1/8"	6-5/8"	4-1/4"
CUBE-IND 3FT	36-1/8"	10"	7-11/16"
CUBE-IND 4FT	48-1/8"	10"	7-11/16"
CUBE-IND 6FT	72-1/8"	10"	7-11/16"
CUBE-IND 8FT	96-1/8"	10"	7-11/16"

### CUBE2/4 Continuous Run

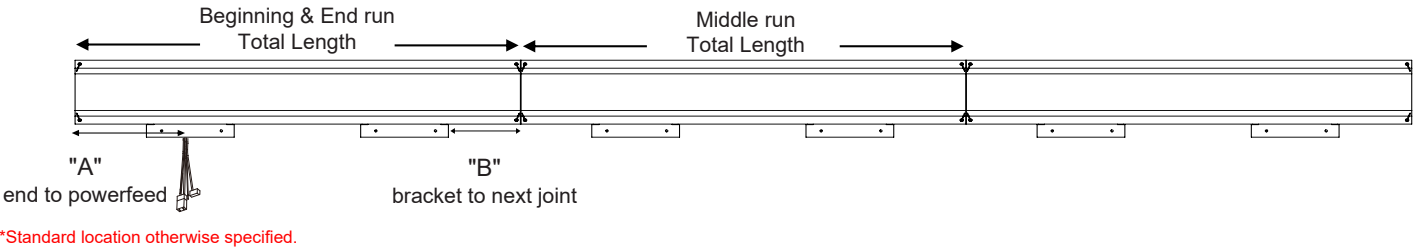

ITEM	Beg. & End Run Total Length	Middle Run Total Length	"A"	"B"
CUBE-CON 2FT	24-1/16"	24"	6-5/8"	4-3/16"
CUBE-CON 3FT	36-1/16"	36"	10"	7-5/8"
CUBE-CON 4FT	48-1/16"	48"	10"	7-5/8"
CUBE-CON 6FT	72-1/16"	72"	10"	7-5/8"
CUBE-CON 8FT	96-1/16"	96"	10"	7-5/8"



866-471-7711  
utopialighting.com  
info@utopialighting.com

Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty voided.


#### WARNING:




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

# CUBE2, CUBE4 WALL MOUNT INSTALLATION INSTRUCTIONS


## INDIVIDUAL RUN INSTALLATION

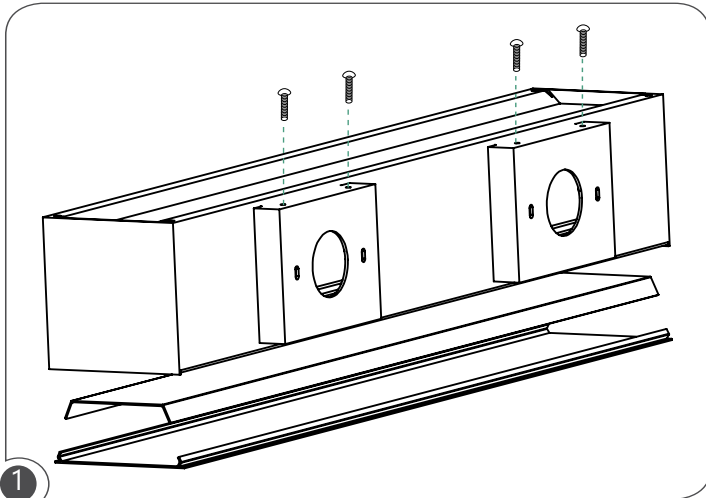


1 Remove lens, module plate and outer wall mount brackets.

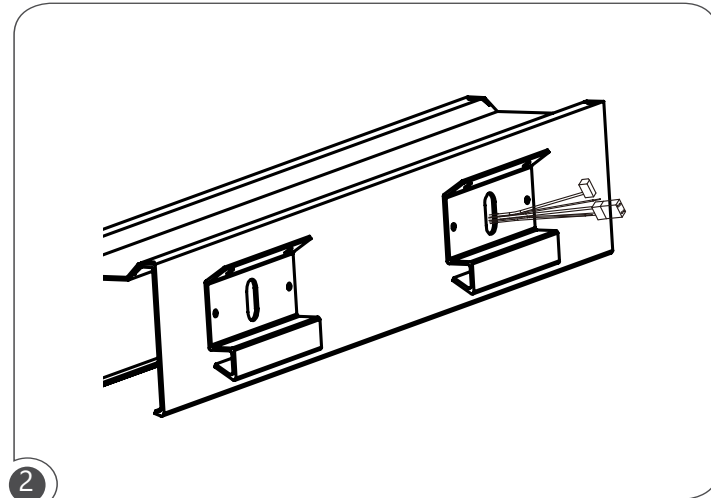

2 Pull out the wires from power feed side.

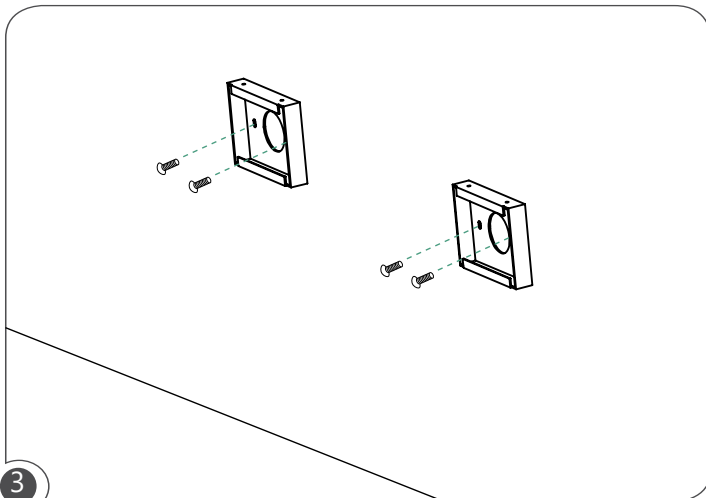

3 Fix and secure the outer wall mount brackets on the wall, screws provided by others.

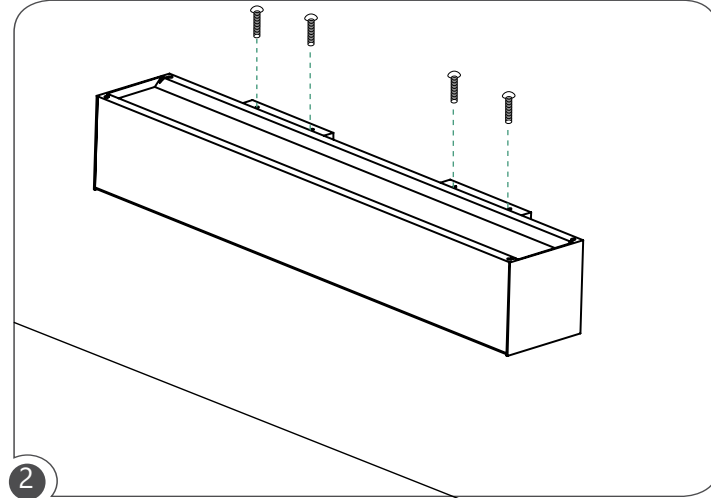

2 Reinstall module plate and lens first, make wire connection, secure the fixture against the wall. Make sure to fix inner and outer wall mount brackets tightly with the screws provided.



866-471-7711  
utopialighting.com  
info@utopialighting.com

Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty voided.


### WARNING:



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


# CUBE2, CUBE4 WALL MOUNT INSTALLATION INSTRUCTIONS

## CONTINUOUS RUN INSTALLATION

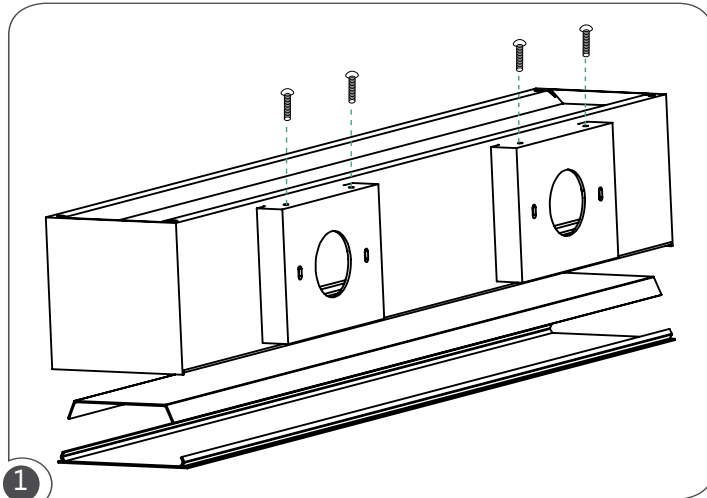


1

Remove lens, module plate and outer wall mount brackets.

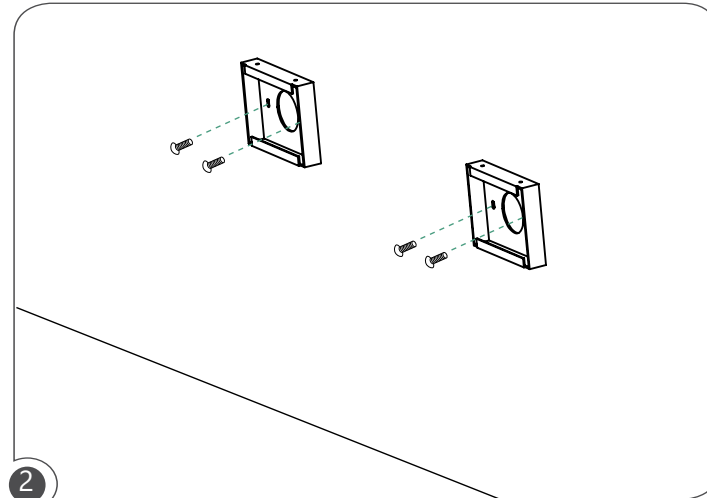


2

Fix and secure the outer wall mount brackets on the wall, screws provided by others.

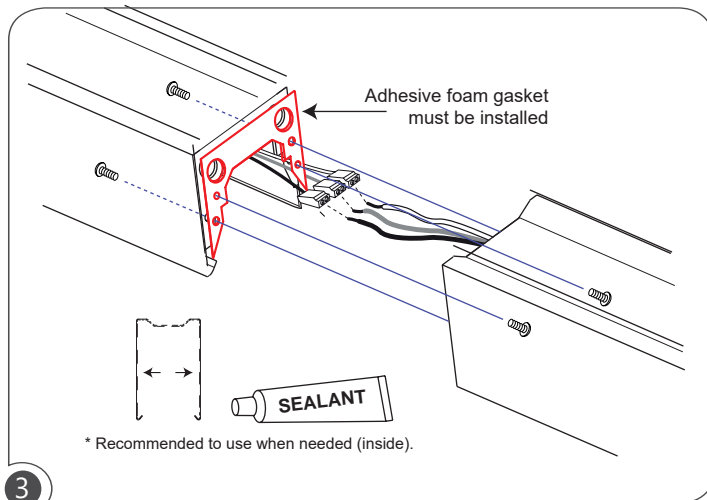

3

Make wire connection for all continuous runs internally and join the runs together with 4 screws provided.

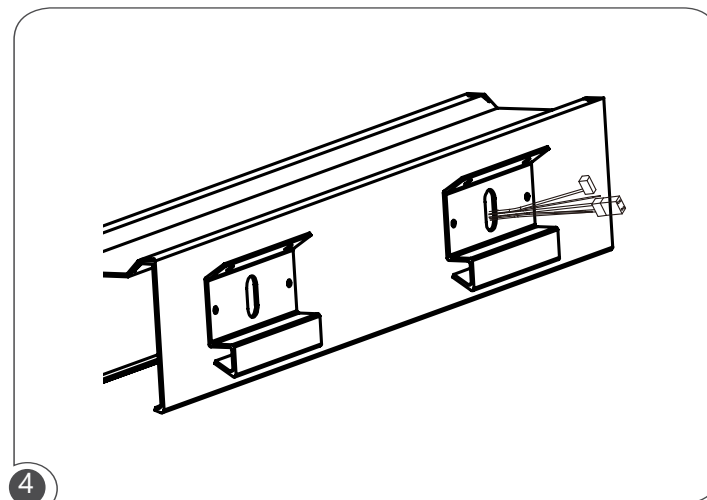

4

Look for the powerfeed location and pull out the main power supply wires.



866-471-7711  
utopialighting.com  
info@utopialighting.com

Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty voided.


WARNING:



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

# CUBE2, CUBE4 WALL MOUNT INSTALLATION INSTRUCTIONS

## CONTINUOUS RUN INSTALLATION

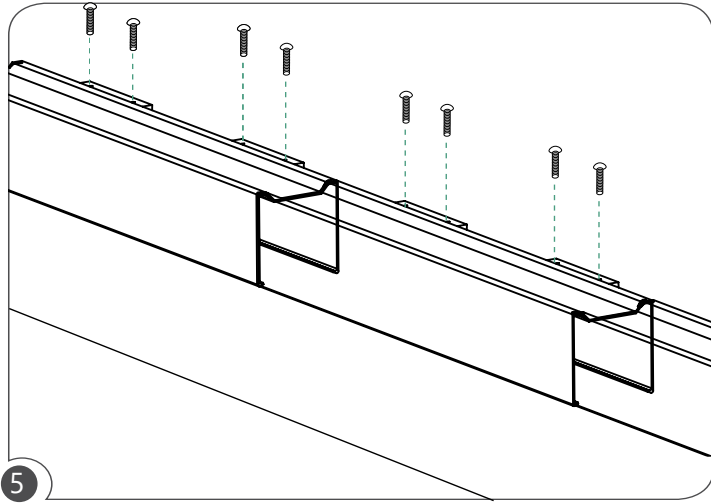

Reinstall module plate and lens first, make wire connection, secure the fixture against the wall. Make sure to fix inner and outer wall mount brackets tightly with the screws provided.



866-471-7711  
utopialighting.com  
info@utopialighting.com

Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty voided.

WARNING:



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

# CUBE2, CUBE4 WALL MOUNT INSTALLATION INSTRUCTIONS

## STANDARD WIRING DIAGRAM



866-471-7711  
utopialighting.com  
info@utopialighting.com

Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty voided.

WARNING:



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.