



# CUBE2, CUBE4 SURFACE MOUNT INSTALLATION INSTRUCTIONS

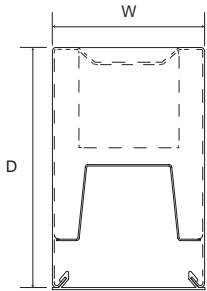

## Specifications: CUBE2

Width: 2.5 (64)  
Depth: 4 (101)

All dimensions are in inches (millimeters).

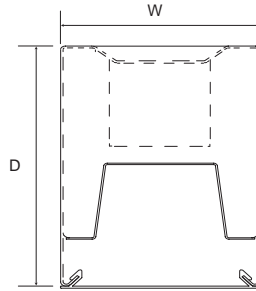

## Specifications: CUBE4

Width: 4 (101)  
Depth: 4 (101)

All dimensions are in inches (millimeters).

### • PART LIST

A: Lens

B: LED module plate


C: BX cable connector

D: Self-drilling anchor screw

E: Washer


F: J-box

G: Screws

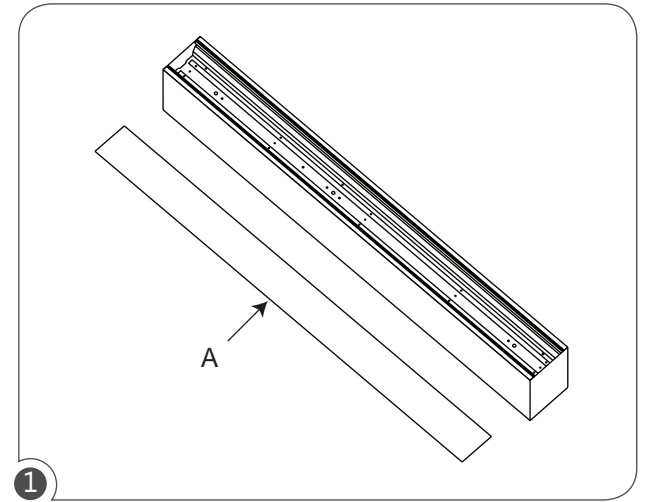


1

Remove lens(A).

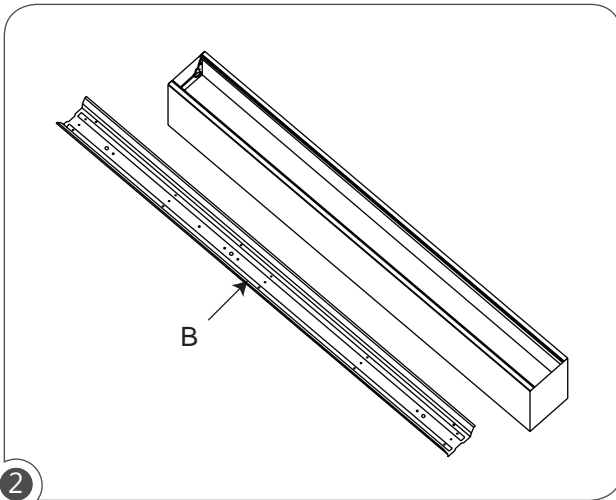


2

Remove LED module plate(B).

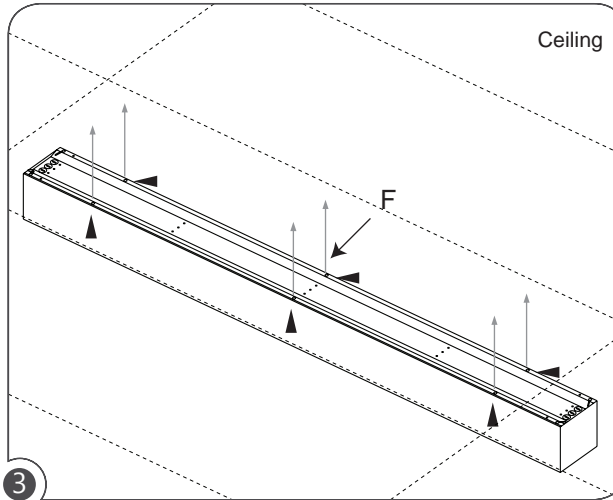

3

Align fixture to ceiling to mark holes and locate J-box(F).

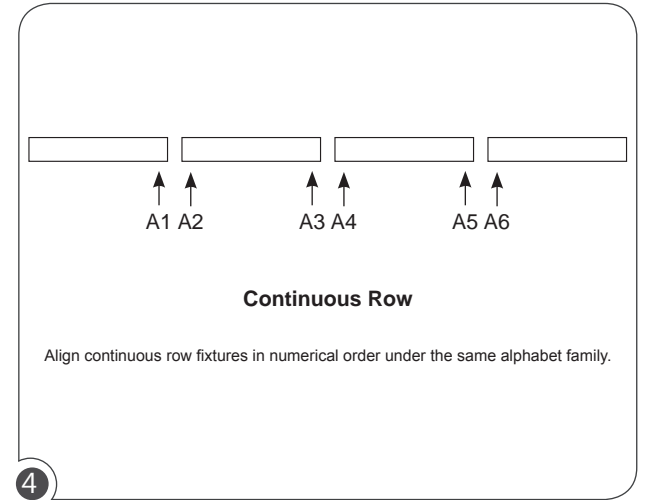

4

### Continuous Row

Align continuous row fixtures in numerical order under the same alphabet family.

Refer to [4A, 4B] on the last page for detailed installation instructions.



866-471-7711  
utopialighting.com  
info@utopialighting.com


Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty voided.

### WARNING:




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


# CUBE2, CUBE4 SURFACE MOUNT INSTALLATION INSTRUCTIONS

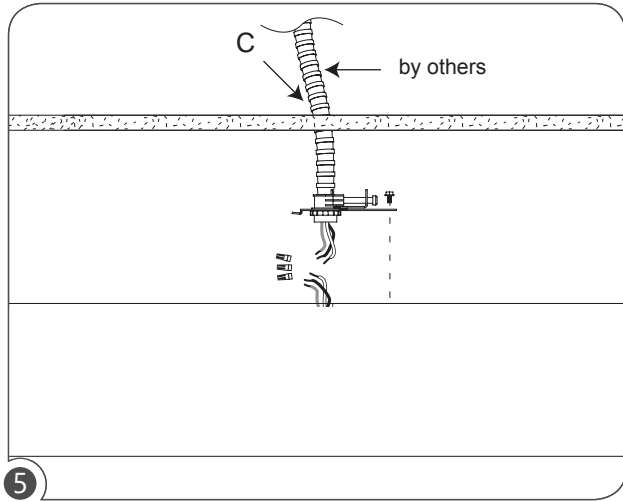


5 Knockout hole for BX cables(C) and make wire connection to Fixture wires.

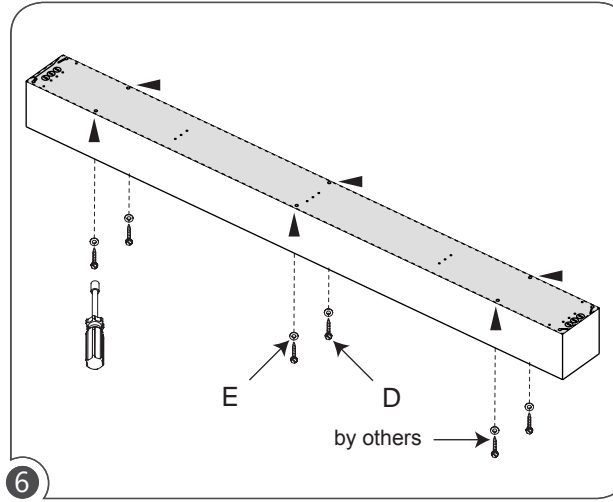

6 Screw fixture to ceiling using Self-Drilling Spiral Anchors(D) with washer(E).

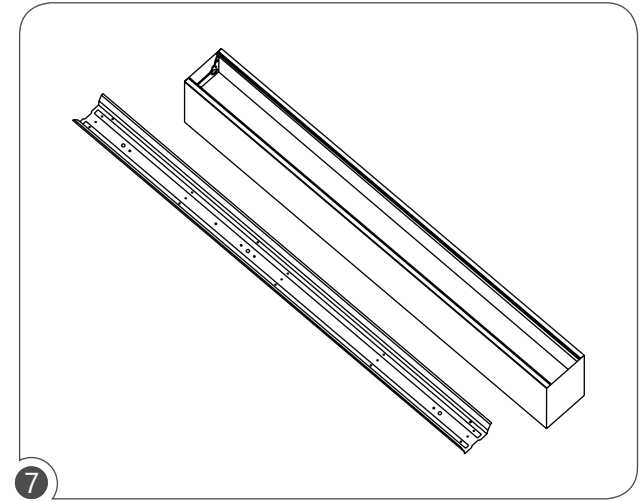

7 Install LED module plate.

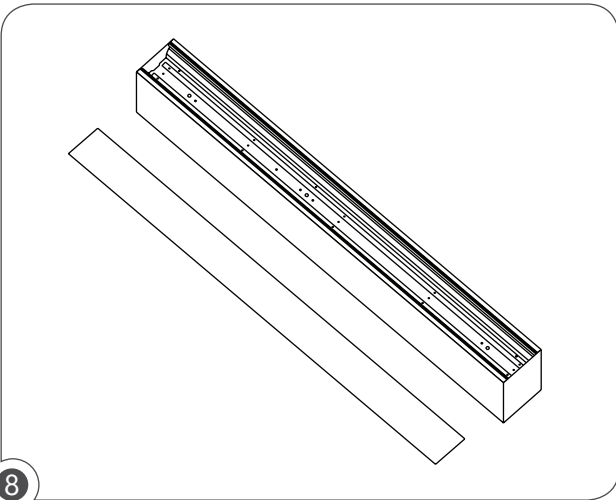

8 Close Lens.



866-471-7711  
utopialighting.com  
info@utopialighting.com

Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty voided.

WARNING:



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


# CUBE2, CUBE4 SURFACE MOUNT INSTALLATION INSTRUCTIONS

## CONTINUOUS ROW

### TOOL(S) NEEDED:


Option 1) Cordless drill and an elbow or L-shape adapter with Philips Insert Bit extension.

 Option 2) Flexible Screwdriver with Philips Insert Bit.




### Continuous Row

Align continuous row fixtures in numerical order under the same alphabet family.

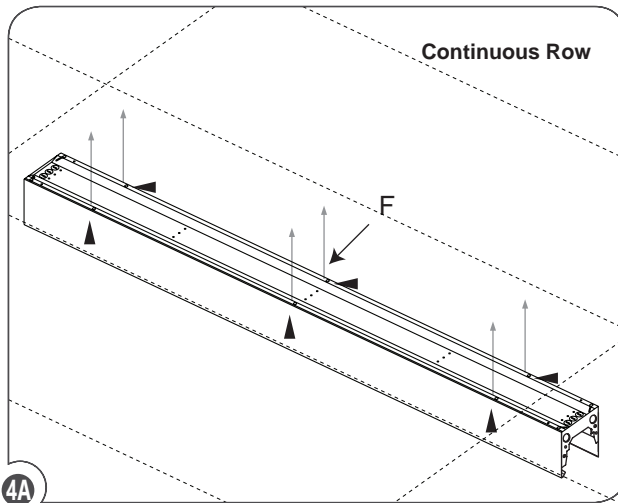

Align all continuous fixtures to ceiling to mark holes and locate J-box(F).

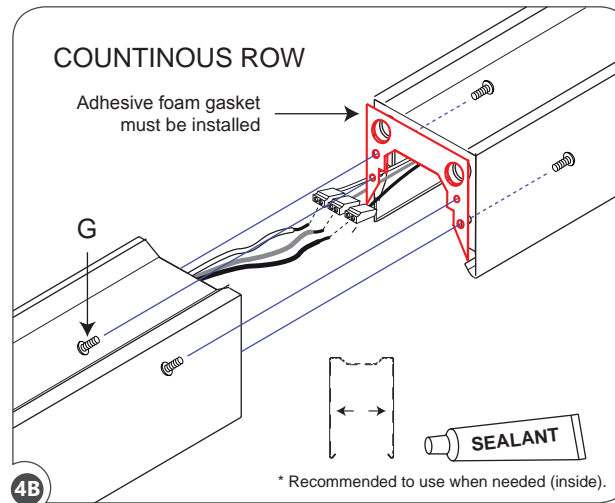

- 1) Make wiring connection from each fixture power supply wires together.
- 2) Align fixtures and screw together with 4 screws(G).



866-471-7711  
utopialighting.com  
info@utopialighting.com

Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty voided.

### WARNING:



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.